



Transpose enable = [TRANSPOSE] + [TRACK] to enable/disable

Transpose = [TRANSPOSE] + keyboard

Transpose lock = [FUNCTION] + [TRANSPOSE]

Transpose permanent = [TRACK] + [UP]/[DOWN] per semitone

Save pattern = [YES/SAVE] + [KEYBOARD F1]

Save kit = [YES/SAVE] + [KEYBOARD C1]

Save sound = [YES/SAVE] + [KEYBOARD D1]

Save track = [YES/SAVE] + [KEYBOARD E1]

Reload pattern to saved state = [NO/RELOAD] + [KEYBOARD F1]

Reload kit to saved state = [NO/RELOAD] + [KEYBOARD C1]

Reload sound to saved state = [NO/RELOAD] + [KEYBOARD D1]

Reload track to saved state = [NO/RELOAD] + [KEYBOARD E1]

Copy pattern = PLAY MODE, [FUNCTION] + [REC]

Copy track = GRID REC, [FUNCTION] + [REC]

Copy track page = GRID REC, [PAGE] + [REC]

Copy trig = GRID REC, Trig/s + [REC]

Paste pattern = PLAY MODE, [FUNCTION] + [STOP] (repeat to undo)

Paste track = GRID REC, [FUNCTION] + [STOP] (repeat to undo)

Paste track page = GRID REC, [PAGE] + [STOP] (repeat to undo)

Paste trig = GRID REC, Trig + [STOP]

Clear pattern = PLAY MODE, [FUNCTION] + [PLAY] (repeat to undo)

Clear track = GRID REC, [FUNCTION] + [PLAY] (repeat to undo)

Clear track page = GRID REC, [PAGE] + [PLAY] (repeat to undo)

Erase track trigs = hold [TRACK/s] + [NO/RELOAD]

Erase single parameter lock = GRID REC, [TRIG] + DATA ENTRY knob

Erase all parameter locks = LIVE REC, [FUNCTION] + [NO/RELOAD]

Mute trigs = hold trigs and press [BANK A/E]

Accent trigs = hold trigs and press [BANK B/F]

Shift trigs = GRID REC, hold [FUNCTION] + [LEFT]/[RIGHT]

Slide trigs = hold trigs and press [BANK C/G]

Slide parameters = hold trigs and press [BANK D/H]

Tempo shift = +/-10% by pressing the [LEFT]/[RIGHT]

Swing = [FUNCTION] + [KEYBOARD B1]

Pattern master length = [FUNCTION] + [UP]/[DOWN]

Micro time adjust = GRID REC, hold trig/s, [LEFT]/[RIGHT], enter

Metronome toggle = [FUNCTION] + [KEYBOARD A1]

Quantize live record on/off = LIVE REC, [RECORD] + [PLAY]

Load project = [FUNCTION] + [GLOBAL]

Sound lock = hold trigs + LEVEL

Sound browser = Double tap [TRACK] ([LEFT] for sort [RIGHT] for menu)

Sound settings = [FUNCTION] + (Osc1, Osc2, Filter, Amp, Env or LFO)

Poly mode config = [FUNCTION] + [KEYBOARD C1]